Installation and Operating Instructions

Panel Heater
Model : NP Range

INCCUK35RG Issue 1

Dimensions
(millimetres)

Model	Specification
NP 150	1.5 kW Mains Neon Indicator
NP 200	2.0 kW Mains Neon Indicator

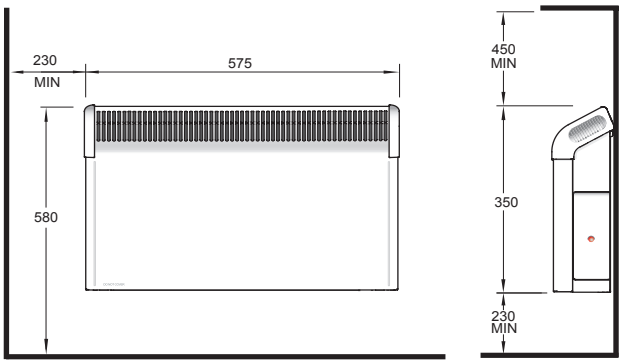

Fig. 1

IMPORTANT : THESE INSTRUCTIONS SHOULD BE READ CAREFULLY AND RETAINED FOR FUTURE REFERENCE

Important Safety Advice

WARNING – THIS APPLIANCE MUST NOT BE USED IN A BATHROOM.

WARNING - DO NOT USE THIS HEATER IN THE IMMEDIATE SURROUNDINGS OF A BATH, A SHOWER OR A SWIMMING POOL.

WARNING – THIS HEATER MUST NOT BE LOCATED IMMEDIATELY BELOW A FIXED SOCKET OUTLET.

DO NOT USE THE HEATER UNTIL THE WALL BRACKET IS FITTED CORRECTLY.

WARNING: This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

FOLLOW these instructions carefully.

NEVER cover or obstruct in any way the heat outlet slots at the top of the heater or the air inlet slots in the base of the heater.

The heater carries a warning 'DO NOT COVER' to alert the user to the risk of fire that exists if the heater is accidentally covered.

Warning: Due care and consideration must be taken when using this heater in series with a thermal control, a program controller, a timer or any other device that switches on the heater automatically, since a fire risk exists when the heater is accidentically covered or displaced.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

If young children, the aged or infirm are likely to be left in the vicinity of the heater, we advise that adequate precautions should be taken. We recommend that a guard be fitted to ensure contact with the heater is avoided and objects cannot be inserted into the product.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.

Electrical

WARNING – THIS APPLIANCE MUST BE EARTHED

The electrical installation must be carried out by a competent electrician, and be in strict accordance with the current I.E.E. regulations for Electrical Equipment in Buildings.

The heater is fitted with a length of flexible cable type H05VV-F size 3 x 1.0mm^2 for connection to the fixed wiring of the premises through a suitable connection box positioned adjacent to the heater.

The supply circuit to the heater must incorporate a double pole isolating switch having a contact separation of at least 3mm.

Supplementary Earth Bonding

Should Equipotential Earth Bonding be required the earthing conductor in the supply cord is deemed to provide the supplementary bonding connection (See Regulation 544.2.5, latest edition I.E.E. Wiring Regulations).

General

The NP panel heater is designed for wall mounting on the bracket supplied and it should only be operated when in the installed position as shown in **Fig. 1** above. Before connecting the heater check that the supply voltage is the same as that stated on the heater. The mains neon indicator will glow to show when the heater is connected to the mains supply. The NP panel heater has no controls and is operated with an external thermostatic or programming controller.

Wall Mounting

IMPORTANT – The wall bracket supplied with the appliance must be used. The heater should be positioned observing the minimum clearances stated around the heater - see **Fig. 1**.

Select a suitable position on a wall, near to a mains power socket, making sure that there is *at least* 230 mm below the heater and *at least* 450 mm above the heater of unobstructed space. Ensure that curtains and furniture are not positioned close to the chosen position, as this would create a potential fire hazard.

DO NOT locate the heater immediately below a fixed socket outlet or connection box.

1. Remove wall mounting bracket from the back of the heater by depressing the spring latch at the top of each bracket - see **Fig. 2**.
2. Fix the wall bracket securely to the wall through the four screw holes provided.
3. Present the heater to the wall bracket, and engage lower slots inthe back with bracket.
4. Raise the heater to upright position and push the heater onto brackets to engage top latch.

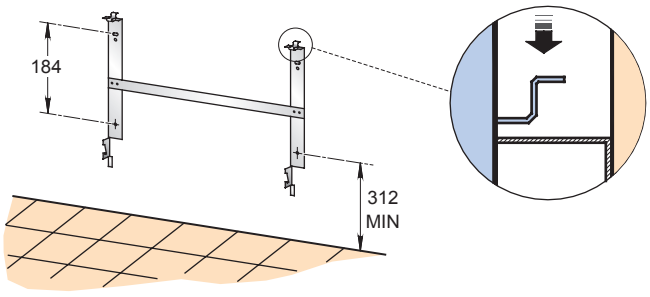

Fig. 2

Safety – overheat protection

For your safety, this appliance is fitted with a thermal cut-out. In the event that the product overheats, the cut-out switches the heater off automatically.
To bring the heater back into operation, remove the cause of the overheating, then turn off the electrical supply to the heater for a few minutes. When the heater has cooled sufficiently, re-connect the electrical supply to turn on the heater.

Important Notes

Although this heater is manufactured to comply with the relevant safety standards, certain types of carpets could become discoloured by the temperatures under the heater. If you are concerned about this, we recommend that you contact the carpet manufacturer for guidance.
You may notice some parts of the element appearing to be hotter from time to time because of the variable airflow through the heater. This does not cause a safety hazard.
The heat outlet grille may become discoloured with use – this is caused by airborne pollution and is not a fault.

Cleaning and User Maintenance

WARNING – ALWAYS DISCONNECT FROM THE POWER SUPPLY BEFORE CLEANING THE HEATER.
Do not use detergents, abrasive cleaning powder or polish of any kind on the body of the heater.
Allow the heater to cool, then wipe with a dry cloth to remove dust and a damp cloth (not wet) to clean off stains. Be careful not to allow moisture into the heater.

Recycling

For electrical products sold within the European Community.

At the end of the electrical products useful life it should not be disposed of with household waste.
Please recycle where facilities exist.
Check with your Local Authority or retailer for recycling advice in your country.

After Sales Service

Your product is guaranteed for one year from the date of purchase.

Within this period, we undertake to repair or exchange this product free of charge provided it has been installed and operated in accordance with these instructions.

Your rights under this guarantee are additional to your statutory rights, which in turn are not affected by this guarantee.

Should you require after sales information or assistance with this product please go to **www.credaheating.co.uk** where you will find our self help guide by clicking on “Help Centre” or ring our helpdesk on 0844 879 3588 (UK) or 01 842 4833 (R.O.I.).

Spare parts are also available on the website

www.credaheating.co.uk

Please retain your receipt as proof of purchase.

CE The product complies with the European Safety Standards EN60335-2-30 and the European Standard Electromagnetic Compatibility (EMC) EN55014, EN60555-2 and EN60555-3. These cover the essential requirements of EEC Directives 2006/95/EC and 2004/108/EC

CREDA HEATING
MILLBROOK HOUSE
GRANGE DRIVE
HEDGE END
SOUTHAMPTON
SO30 2DF

United Kingdom:
Tel: 0844 879 3588
Fax: 0844 879 3583
Website: www.credaheating.co.uk

Republic of Ireland:
Tel: 01 8424833

INCCUK35RG Issue 1

[c] GDC Group Ltd
All rights reserved. Material contained in this publication may not be reproduced in whole or in part, without prior permission in writing of Creda.
A division of GDC Group Ltd